

## Precautions

1. Charge before use
2. After charging is complete, unplug the power cord.
3. In order to prolong the service life of the battery, it is recommended to charge and maintain it every three months.

## Warnings

- 1: Please keep the unit dry. Do not touch this product with wet hands. Do not immerse the product in water or expose to rain.
- 2: Do not disassemble, crush, impact or put into fire.
- 3: Do not use in the presence of flammable gases, otherwise may cause an explosion or fire.
- 4: Do not use, store or charge in high temperature environment or closed space under direct sunlight.
- 5: Please use the specified charger to charge the battery and use it within the specified voltage.
- 6: This product involves a battery, please strictly follow the corresponding operating specifications for the use of the battery, otherwise it may cause an explosion or fire.

## Warranty & Support

1. This product is guaranteed for one year and the built-in battery is warranted for 12 months.
2. Warranty is calculated from the date of first purchase of the product.
3. For all enquiries please email [hello@explorerphotovideo.com](mailto:hello@explorerphotovideo.com)

## Warranty void if

1. Product or component exceeds warranty.
2. Cannot provide valid receipt of purchase.
3. Damage caused by failure to follow the instructions.
4. Damage caused by improper handling, dropping.
5. Malfunction or damage caused by contact with or exposure to improper temperature, solvents, acids, bases, flooding, or moisture.
6. Malfunction and damage caused by non authorised repairs, disassembly
7. Malfunction or damage due to force or accident.
8. Malfunction and damage caused by using a power source other than the specified one, voltage.

## Follow us on Instagram

@explorerphotovideo



## Explorer Photo and Video

Sydney, Australia

Los Angeles, United States of America

W: [explorerphotovideo.com](http://explorerphotovideo.com)


E: [hello@explorerphotovideo.com](mailto:hello@explorerphotovideo.com)

# explorer

PHOTO & VIDEO

## auraLED<sup>915</sup>



## Instruction Manual

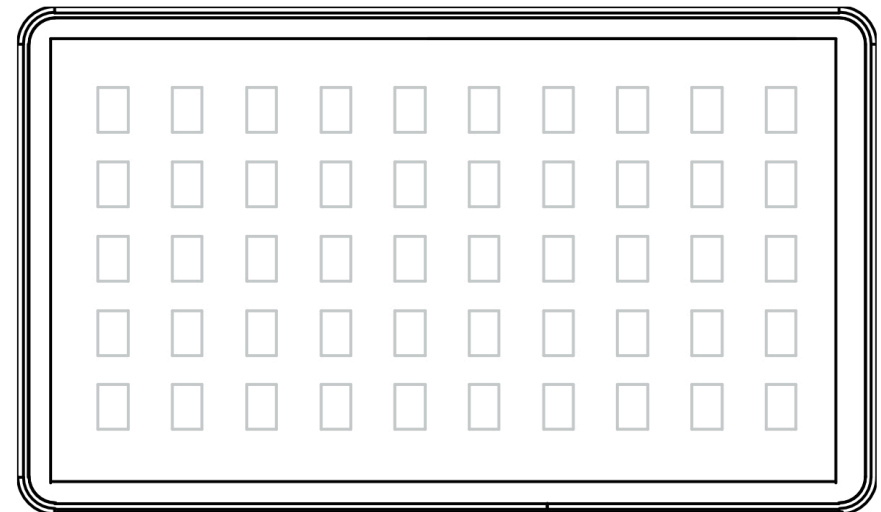

## What's in the box

- Aura LED light
- Hot/Cold shoe mount
- USB-C Charging Cable
- Instruction Manual

# Product Controls and Display

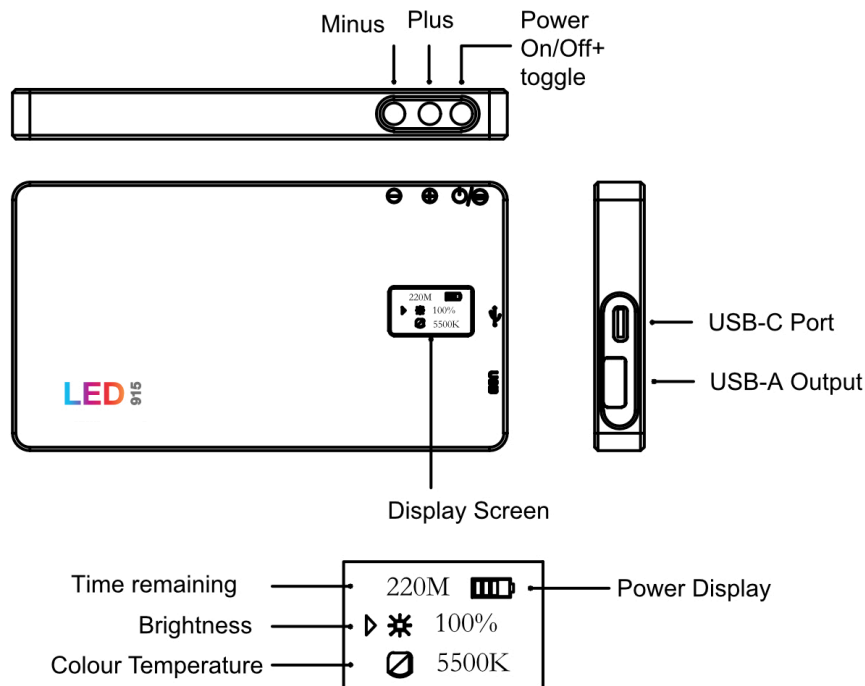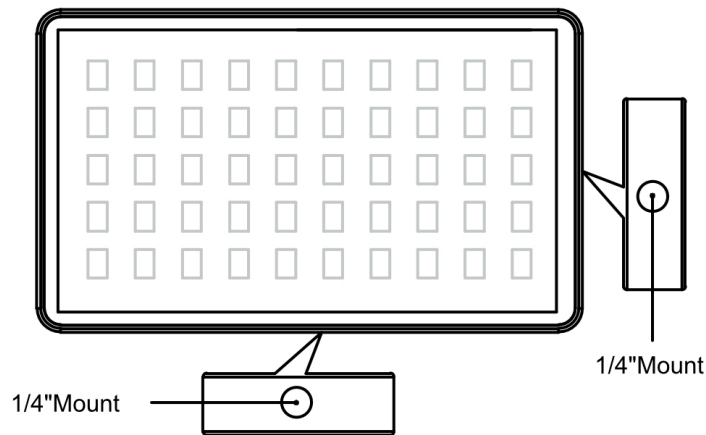

# How to use

## 1 - Power on/off

Press and hold the power button for 3 seconds to turn the power on or off.

## 2 - Button controls

Once the LED light is on, press the on/off button to toggle between brightness and colour temperature. Push the (+) button to adjust the selection up. Push the (-) button to adjust the selection down.

# Power Bank Mode

To use the Aura LED 600 as a power bank, plug a USB-A cord into the USB-A output. Plug cord into your device. The Aura LED 600 will now act as a power bank.

Please note the light cannot be used in power bank mode.

# Product Specification

Power range	5%-100%, adjustable
Colour temperature	3000K-5500K (+/- 300), adjustable
Max brightness	915LM
Max illumination	1220LUX/0.5m (0.5m, 5600k @ 100% power)
Number of LED	64 normal + 64 warm colour
Colour rendering	>95 (RA), White light mode
Charging port	USB-C, 5V/2A
Charging Time	Approx. 7 hours
Built in lithium battery	DC3.7V/6000mAH
Battery life	100% power @ 5500K for 4 hours
Temperature operation	-10C-35C, storage temp -10C-50C
Mounting port	Universal 1/4 inch mount x 2
Dimensions	140x76x14mm
Weight	240g
Included items	LED fill light x 1, USB charging cable x 1, Hot/cold shoe mount x 1, Manual x 1

auraLED915

