#### **Precautions**

- 1. Charge before use
- 2. After charging is complete, unplug the power cord.
- 3. In order to prolong the service life of the battery, it is recommended to charge and maintain it every three months.

## Warnings

- 1: Please keep the unit dry. Do not touch this product with wet hands. Do not immerse the product in water or expose to rain.
- 2: Do not disassemble, crush, impact or put into fire.
- 3:Do not use in the presence of flammable gases, otherwise may cause an explosion or fire.
- 4:Do not use, store or charge in high temperature environment or closed space under direct sunlight.
- 5: Please use the specified charger to charge the battery and use it within the specified voltage.
- 6: This product involves a battery, please strictly follow the corresponding operating specifications for the use of the battery, otherwise it may cause an explosion or fire.

## **Warranty & Support**

- 1:This product is guaranteed for one year and the built-in battery is warranted for 12 months.
- 2: Warranty is calculated from the date of first purchase of the product.
- 3: For all enquiries please email hello@explorerphotovideo.com

# Warranty void if

- 1:Product or component exceeds warranty.
- 2:Cannot provide valid receipt of purchase.
- 3:Damage caused by failure to follow the instructions.
- 4:Damage caused by improper handling, dropping.
- 5:Malfunction or damage caused by contact with or exposure to improper temperature, solvents, acids, bases, flooding, or moisture.
- 6:Malfunction and damage caused by non authorised repairs, disassembly
- 7:Malfunction or damage due to force or accident.
- 8:Malfunction and damage caused by using a power source other than the specified one, voltage.

## Follow us on Instagram

@explorerphotovideo



## **Explorer Photo and Video**

Sydney, Australia

Los Angeles, United States of America


W: explorerphotovideo.com

E: hello@explorerphotovideo.com



# aura RGB

# Instruction Manual

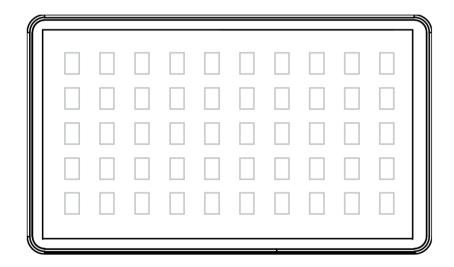


## What's in the box

Aura RGB LED light

- Hot/Cold shoe mount
- USB-C Charging Cable
- Instruction Manual

# **Product Controls and Display**

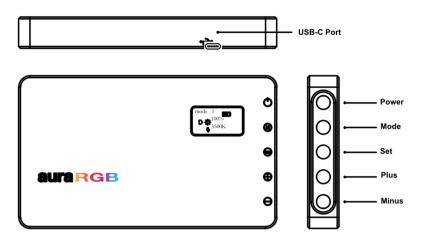

# **Product Specifications**

Power range	1%-100%, adjustable		
Colour temperature	2500K-8500K (+/- 300), adjustable		
Max brightness	630LM		
Max illumination	850LUX/0.5m (0.5m, 5600k @ 100% power)		
Number of LED	28 two colour + 24 RBG colour		
Colour rendering	>95 (RA), White light mode		
Charging port	USB-C, 5V/2A		
Charging Time	Approx. 2 hours		
Built in lithium battery	DC3.7V/3000mAH		
Battery life	100% power @ 5200K for 1.2 hours		
Temperature operation	-10C-35C, storage temp -10C-50C		
Mounting port	Universal 1/4 inch mount		
Dimensions	115x58x14mm		
Weight	165g		
Included items	LED fill light x 1, USB charging cable x 1, Hot/cold shoe mount x 1, Manual x 1		

## How to use

#### 1 - Power on/off

Press and hold the power button for 3 seconds to turn the power button on or off.

## 2 - Button Controls

Once the LED light is on, press the mode button to toggle between the 8 different modes. The mode number located on the rear LCD display will indicate which mode you are in.

Push the (+) button to adjust the selection up. Push the (-) button to adjust the selection down.

Mode Menu							
Mode	Icon	Туре	Parameter				
	<b>举</b>	Power	1%-100%				
	<b>10</b>	Shade	7000K				
	<u></u>	Cloudy	6000K				
Mode 1	B	Flash	5500K				
Orange Light		Noon light	5200K				
	) <del>),((</del>	Fluro Light	4000K				
	-\tilde{\	Fluro Lamp	3200K				
	<del>*</del>	Power	1%-100%				
Mode 2 Temperature	0	Colour Temp	2500K-8500K				
Maria 0	<b>举</b>	Power	1%-100%				
Mode 3  RGB Colour	&	Tone	0-360				
TOB Golda	88	Saturation	0L-100L				
Mode 4	R	Red	0-100%				
RGB Adjust	G	Green	0-100%				
1 CB / Kajust	В	Blue	0-100%				
	<b>举</b>	Power	1%-100%				
Mode 5	<b>6</b>	Light change	A: slow				
Lava Lamp		speed	B:Medium				
		Special	C:Fast				
	<b>举</b>	Power	1%-100%				
Mode 6	_		A: Fast				
Lightning Flash	8	Flash Speed	B: Medium				
			C: Slow				
	<b>举</b>	Power	1%-100%				
Mode 7		Ambulance	A: Fast				
Warning Light	並	Ambulance	B: Medium				
		Ambulance	C: Slow				
	<b>*</b>	Power	1%-100%				
	₽9	Bar	1				
	▲	Birthday	2				
Mode 8	8	Fairy tale	3				
Scenes	Wille	Grassland	4				
		Waves	5				
	<i>ሸ</i> ታ	Aurora	6				
	•	Film and TV	7				